

How to replace

PULLEY BEARINGS on BLACK DEVIL



STEP 1. take off the seeger from pulley




Step 2. position pulley on press for ejecting the bearings



**Should you not have a press
you can use an ejector**

STEP 3. insert a tool to press out the cam of pulley

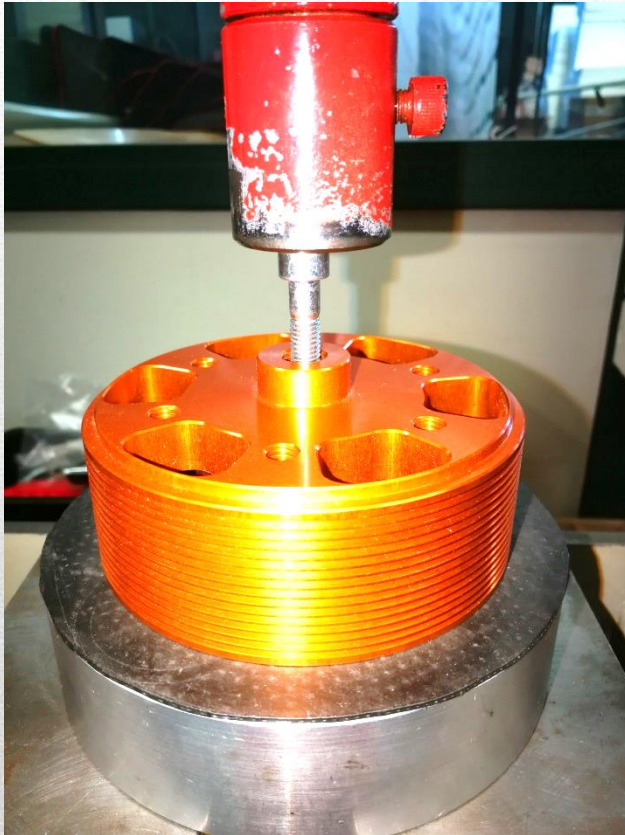

Step 4. cam of pulley with bearings ejected from pulley



STEP 5. take off seeger on bearings



STEP 6. with a long tool eject bearings from cam of pulley



STEP 7. bearings ejection on press




STEP 8. using a cylinder shape core dry pressing install the first bearings



STEP 9. insert fist bearings on cylinder shape core dry pressing



STEP 10. press it down cam of pulley

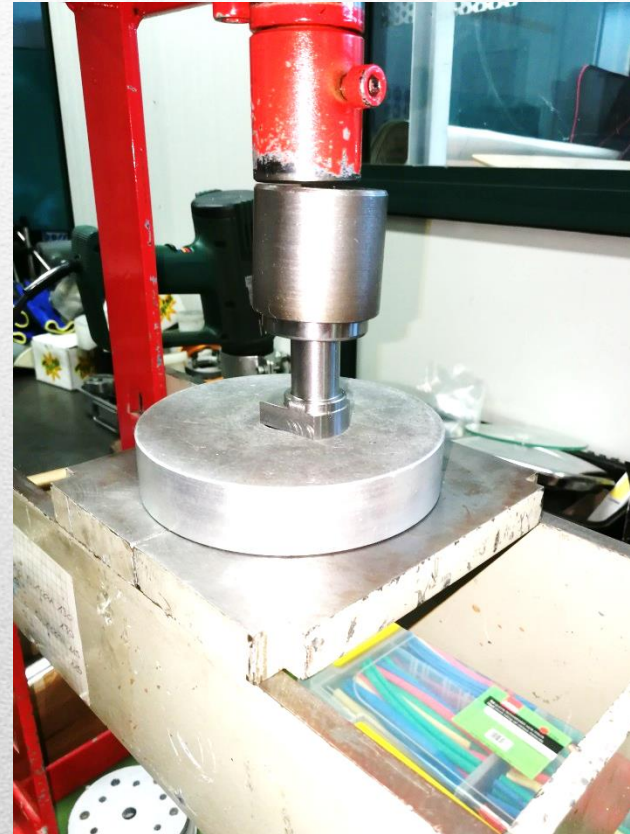

STEP 11. insert the washer in between the two bearings, you have previously took off



STEP 12. press second bearing using following again steps 8-9-10



STEP 12. install the seeger back on top of bearings



STEP 13. insert the cam of pulley with bearings on pulley



STEP 13. insert pulley
seeger back on.

