

BST 001 SREW



BST 002 WASHER



BST 003 SPACER DISC



BST 004 COVER



BST 005 COIL SPRING outside



BST 007 COIL



BST 008 CORD



BST 009 COIL SPRING inside




BST 010 SCREW




BST 011 SPACER



BST 014 STARTER ASSY

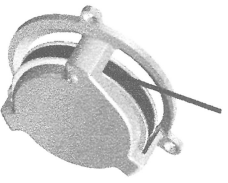

BST 006 HANDLE

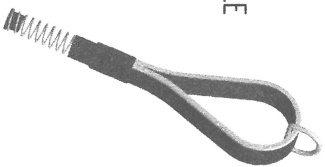

BST 012 STARTER HOUSING



BST 013 SCREW



BST 010 SCREW

